


Basic Construction Process – ADHERED THIN BRICK



Mechanically Fasten Backer Panel

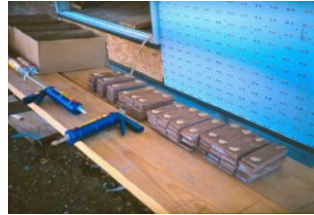

Place Adhesive on THIN BRICKS



Install THIN BRICKS onto wall



Tuck Point Mortar Joints



Strike and Clean



Can Be Done Off Site